



HM GP ZX10 Speed Sensor Install Guide

The ABS Speed sensor module has 4 wires:


1. Switched Power IN (**RED**)
2. Ground (**BLACK**)
3. ABS Signal IN (**GREEN**)
4. Speed Signal OUT (**BLUE**) [to connect to GP Shifter **BLUE** wire]

1. **Switched Power IN** There is a black three way connector with switched power as shown:



This connector has three wires, the centre wire is **blue** with a black trace. Connect this to the **RED** wire from the ABS module. This can be done by splicing or by removing the pin, wrapping the **red** wire around the pin and re-inserting.

2. **Ground (BLACK)** Connect this directly to the negative terminal of the battery.
3. **ABS Signal IN (GREEN)** Connect to the **RED/YELLOW** wire of the Rear ABS connector. This can be done by splicing or by wrapping the **GREEN** wire around the pin as shown:

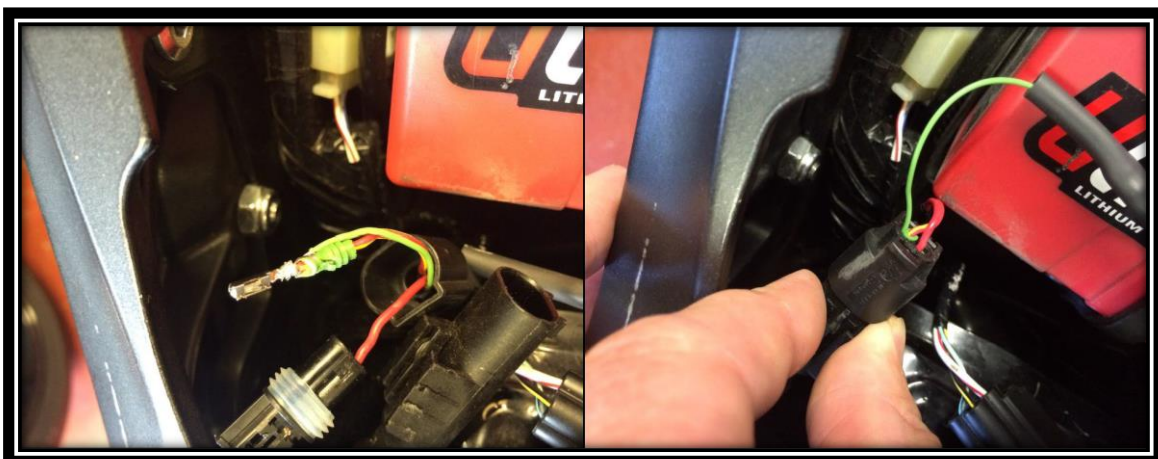

4. **Speed OUT (BLUE)** Connect this directly to the Speed (**BLUE**) wire of the GP Shifter

If you need any assistance please call out Tech Team on +44 (0)1795 429168
or email info@HMQuickshifter.com